






















PROGRAM MODES

TIME MODE		SPEED MODE		DISTANCE MODE	
					
ON	OFF	COVERAGE	SPEED	WET	DRY
					
					
SECONDS		%	KPH/MPH	METERS	
3	3	15%	8/5	15	0
6	6	30%	16/10	20	5
9	9	50%	24/15	30	10
20	20	75%	32/20	45	20
30	30	90%	40/25	60	30
WET				WET	DRY
DRY				DRY	WET
WET				WET	DRY
DRY				DRY	WET
WET				WET	DRY

WATER LEVEL

	FLASHING 90% +
	PRESS 1 TIME TO STOP FLASHING
	STEADY 50 TO 90%
	STEADY 25 TO 50%
	STEADY 5 TO 25%
	FLASHING BELOW 5%

ALL FUNCTIONS ELECTRICAL FAULT

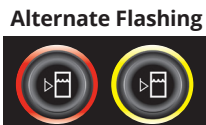

FUNCTIONS

FUNCTION ON



FUNCTION OFF In Program Mode



ALTERNATE FLASHING



NO GPS LOCK NO GPS CONNECTION

OPERATIONS NOT ALLOWED

Alternate Flashing



LIGHT DIMMING



Press and hold for 2 seconds to change button brightness. There are 4 levels of brightness.